


QUICK REFERENCE



How to use the system - Panel Keypad KP-102 (option) Status indicator Touch screen - Login/logout - Voice guide 440 Select function to use Return to home screen **a** (?)-11 Display help • <u></u> - Switch to enlarge display mode C DEF 3 MINO 6 WXYZ 9 ABC GHI 4 Enter a value or a ß 2 number # Ó Clear a value 🧖 🔕 🐼 ☆ ✓ Reset Stop Power indicator Reset the settings Energy Safe Mode on/off Stop a process Start a process

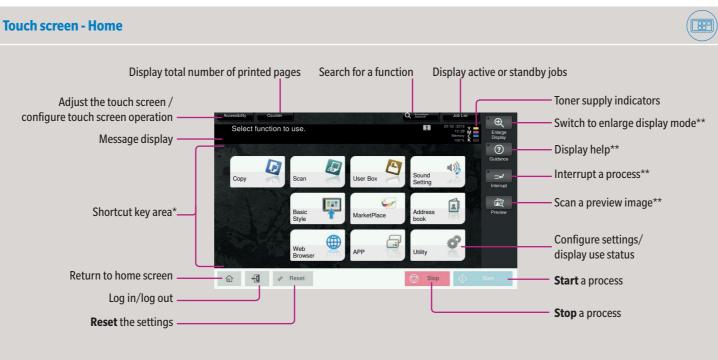

* Up to 25 shortcut keys assigned to any function can be displayed in three screens. **Utility** is always displayed fixed on the lower right of the first page.

This is a **Register key. In the Administrator Settings it can be assigned to any function.

bizhub C650i/C550i/C450i/C360i/C300i/C250i

Operating the touch screen*



1. Tap to select or determine a menu.



2. Double-tap to retrieve detailed information or enlarge a thumbnail image.



3. Drag to move a display position on an application or preview screen.



4. Flick to scroll an address or job list and feed thumbnail-view pages.



5. Long-tap to display the icon related to the document.



6. Drag & Drop to move a document to the intended place.



7. Pan to move a displayed image.



8. Pinch-in/Pinch-out to enlage or reduce a preview image.



9. Rotate two fingers to rotate a preview image.



*Available touch functions vary depending on displayed screen.



Operation of keypad*

1. Tap the numerals or the input area on the screen to display the keypad.

Basic copy functions - Make a copy



2. If necessary, touch the upper side of the keypad and drag it to another display position.



*If the system is equipped with the optional hardware keypad KP-102, it can be used instead.


Zoom

4. Tap **OK**. 5. Tap Start.

1. Position the original(s).

2. Tap Zoom in the copy screen.

3. Make the desired settings.

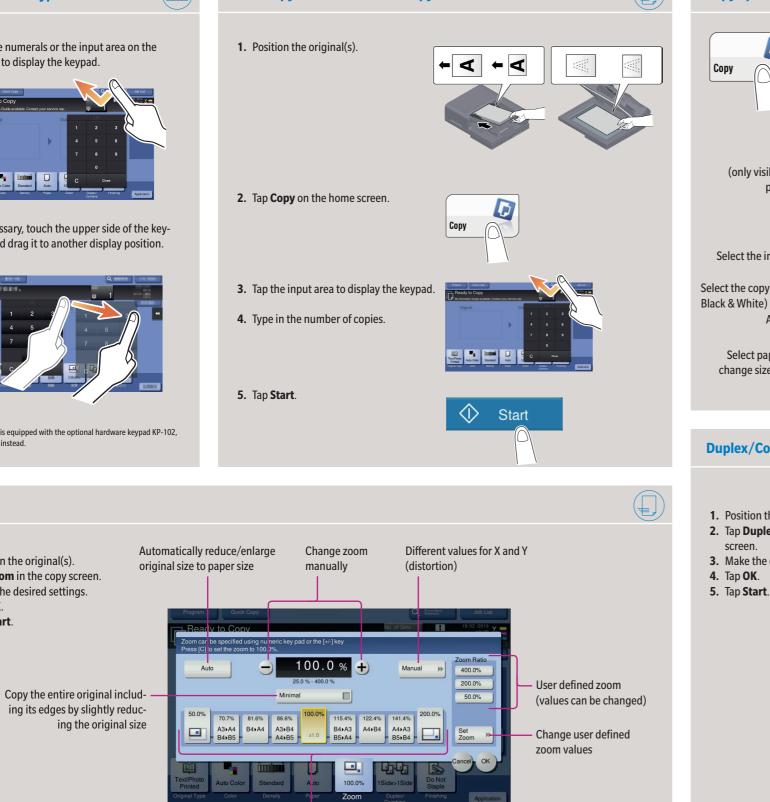


Preset zoom values


| | Copy operations – Basic copy screen |
|----------------------|--|
| | Copy Copy Copy Copy Copy Copy Copy Copy |
| | Input/output image (only visible when originals are placed on platen glass or document feeder) |
| | Select the image quality level of the original Select the copy color mode (e.g. Full Color, |
| | Black & White) Adjust the brightness of the copy Select paper size and type of the original/ |
| Start | change size and type of the paper loaded in paper trays |
| $ \bigcirc \rangle$ | Duplex/Combine |
| and Y | Position the original(s). Tap Duplex/Combine in the copy screen. Make the desired settings. |

votions Docio

nding Positio 1Sided 1Sided No. of Original Auto 1Sided : 2Sided Select 1-sided or Left Bind 2Sid 2-sided copying Right Bind Top Bind 25 d

bizhub C650i/C550i/C450i/C360i/C300i/C250i

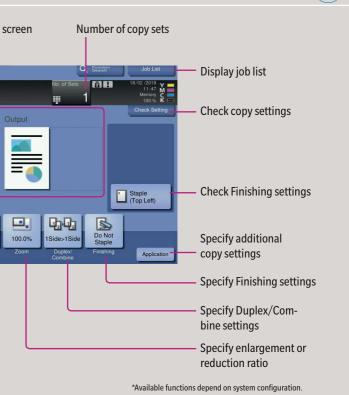


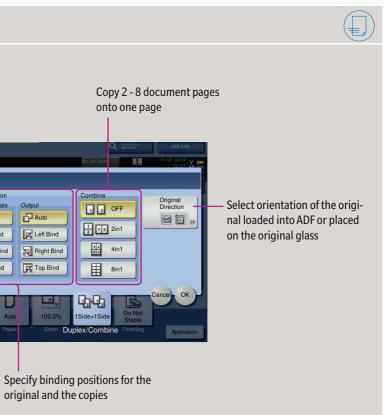

Giving Shape to Ideas




bizhub C650i/C550i/C450i/C360i/C300i/C250i

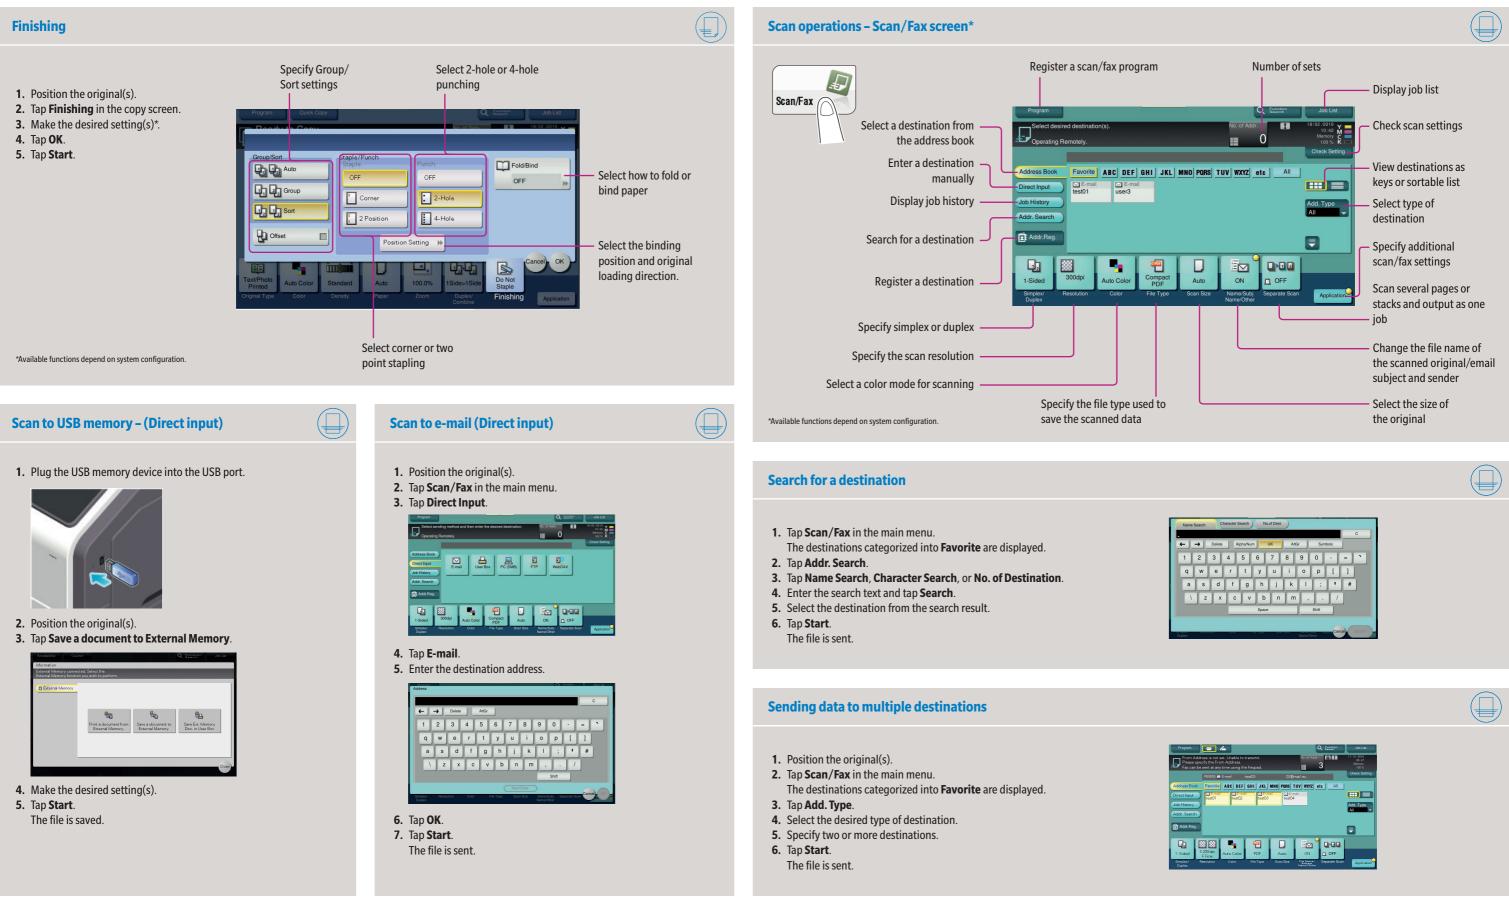

Giving Shape to Ideas



bizhub C650i/C550i/C450i/C360i/C300i/C250i

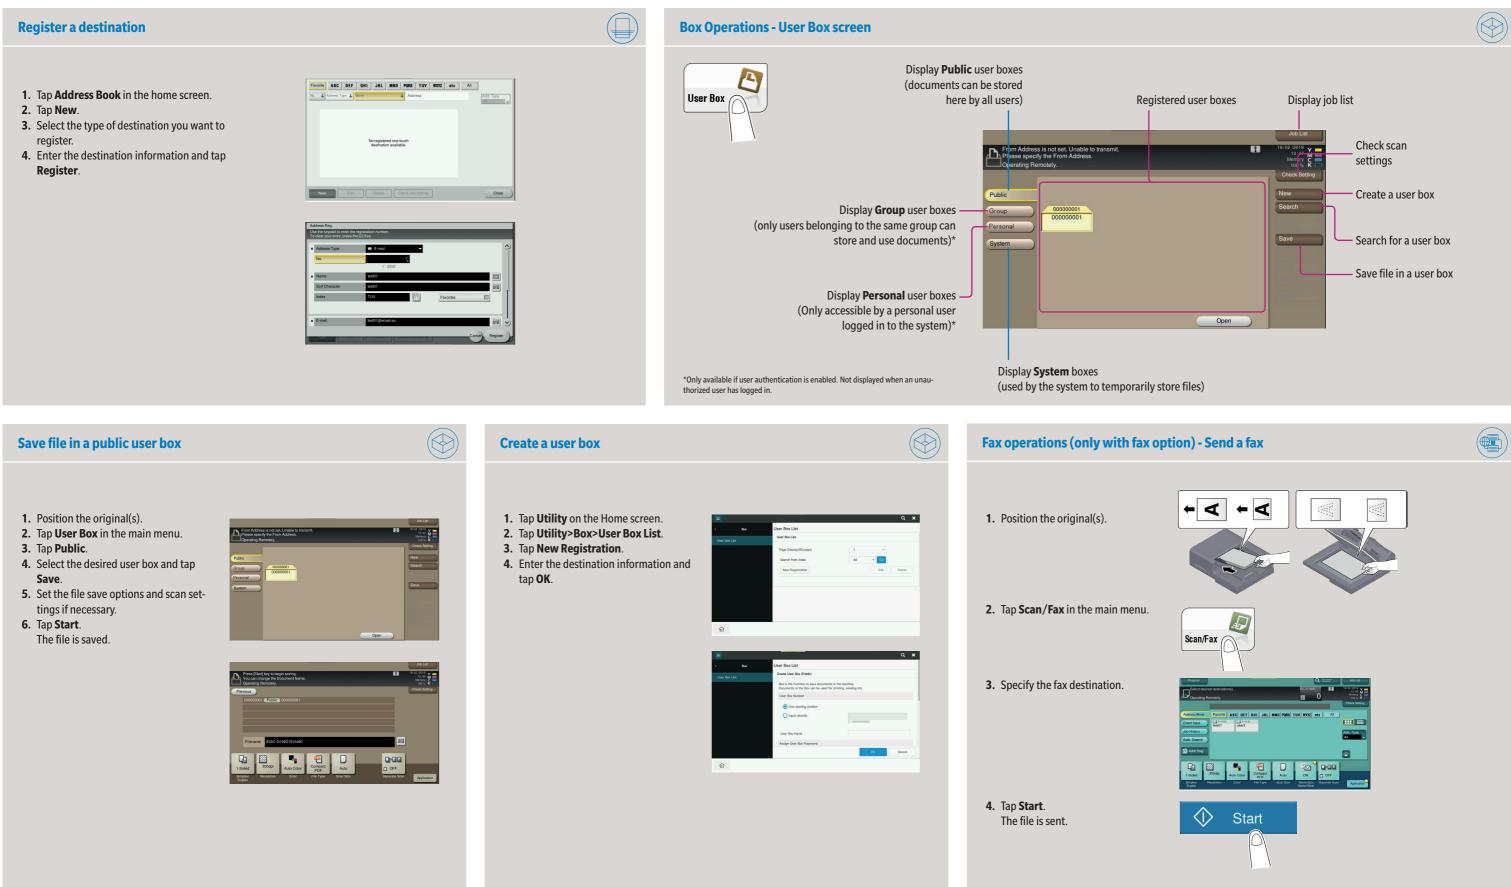



Giving Shape to Ideas